Sitting Pretty

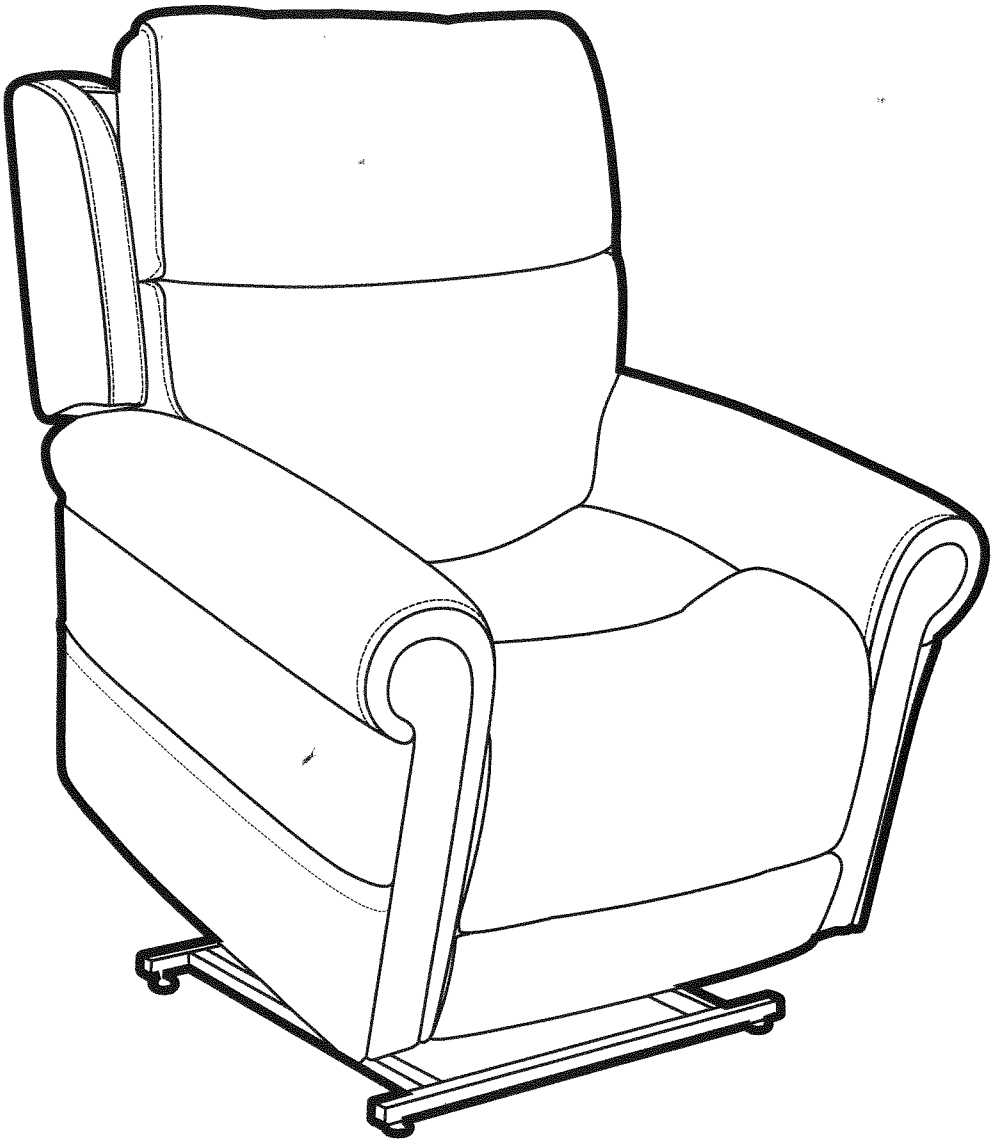

Setup and Operation Guide

Recliner and Lift Chair Collection

Model Name: Summit / Pinnacle

TABLE OF CONTENTS

Important Saftey Instructions ——— 2

Warranty ——— 3

Assembly of Your Lift Chair

Cord and Transformer Connections ——— 5

Chair Assembly ——— 6

Operating Your Lift Chair ——— 7

Lithium-Ion Battery Pack Back-Up System ——— 11

Trouble Shooting ——— 12

Note:

When placing the furniture on non-carpeted flooring, Theorem recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.

- **NOTE:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Sitting Pretty

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER: To reduce the risk of electric shock—Always unplug this furnishing from the electrical outlet before cleaning.**
2. **Unplug from outlet before putting on or taking off parts.**
3. **Close supervision is necessary when used by or near children, or disabled people.**
4. **Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.**
5. **Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.**
6. **Keep the cord away from heated surfaces.**
7. **Never drop or insert any object into any opening.**
8. **Do not use outdoors. Just for household indoor use only.**
9. **Do not operate where aerosol (spray) products are being used or where oxygen is being administered.**
10. **To disconnect, turn all controls to the off position, then remove plug from outlet.**
11. **WARNING: Risk of Injury – Keep children away from extended foot support.**
12. **WARNING: Risk of Injury to Persons—do not use this furnishing to support video equipment such as televisions or computer monitors.**
13. **When not in use, it is recommended that the wand be stored securely in the pocket on the outside of the arm.**

SAVE THESE INSTRUCTIONS.

SERVICING OF DOUBLE-INSULATED PRODUCTS.

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace,

WARRANTY

FIVE-YEAR LIMITED WARRANTY

Theorem Power lift recliners will repair or replace any defective parts or fabric found by an authorised representative within the specified duration period from the date of purchase.
Mechanism Note: Theorem Power Lift Recliners reserves the right to replace only the part of the steel lift mechanism that may be defective.

Note: Theorem Power Lift Recliners provides parts ONLY under warranty. Your Theorem stockist is responsible for labour and service. Please contact your Theorem stockist for information about these services and for any applicable charges.

TWO-YEAR FABRIC WARRANTY

Theorem Power Lift Recliners guarantees to replace any fabric that is found to be faulty as a result of manufacturing defect and which has been used in accordance with our manufacturer performance ratings and care instructions. An evaluation of fabric related issues must be conducted before confirmation of warranty coverage can be verified. Theorem Power Lift Recliners recommends stain resistant treatment before use.

Sitting Pretty

Warranty Duration:
- Frame: 5 Years
- Electronics: 2 Years
- Handsets and Cable: 2 Years
- Chair Mechanisms: 3 Years
- Fabric: 2 Years

CONSUMER WARRANTY AGAINST DEFECTS:

Theorem Power Lift Recliners does not warrant against excessive or incorrect use, modification or any situation that could not be deemed as fair wear and tear. This is a back to base warranty and does not cover freight costs pertaining to the return of any items under warranty. **Theorem** Power Lift Recliners acknowledges and conforms to all ACCC guidelines around consumer rights.

Theorem Power Lift Recliners will not warrant the safety and or correct functioning of products where any original components have been changed or modified by non-**Theorem** Power Lift Recliners approved and trained service & maintenance staff or external providers. Furthermore, safety is not guaranteed where components have been replaced with non-original **Theorem** Power Lift Recliners approved parts. If any faults are detected upon receipt of this product please contact **Theorem** Power Lift Recliners. Any faults that are detected during normal use should be reported to **Theorem** Power Lift Recliners immediately to determine if warranty conditions apply and if so, the necessary repair or replacement work to be completed.

CORD AND TRANSFORMER CONNECTIONS

Once the box has been removed from around the chair, you'll notice the back is laying on top of the seat. There are a couple items to remove from the seat portion of the chair first. Follow the steps below:

1. Remove the zip tie holding the foam bag with the Power Transformer and it's cord on the left.
2. You can either find a remote in the pocket or a side control on the outside of the chair.
3. Remove the control wand from the side pocket of the chair. Remove the wand from the plastic bag and connect it to the female plug located in the left side pocket on the outside of the chair's arm.
4. Connect the Power Transformer to the plug coming from the chair.
5. Connect the Power Cord into the Power Transformer.
6. Connect the Power Cord into an electrical outlet near where the chair will be positioned.

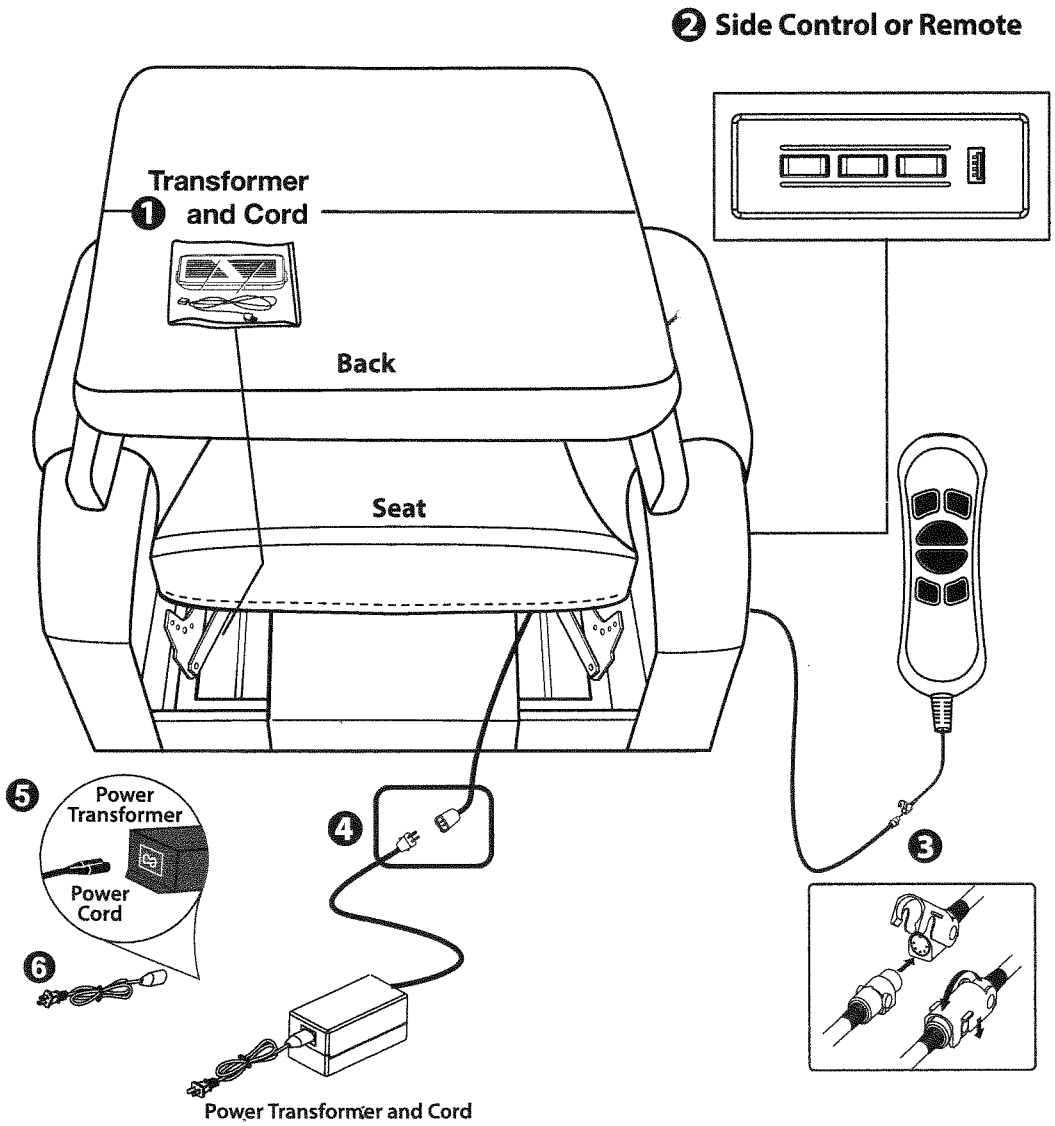

Sitting Pretty

CHAIR ASSEMBLY
ATTACHING THE CHAIR BACK TO THE CHAIR BASE

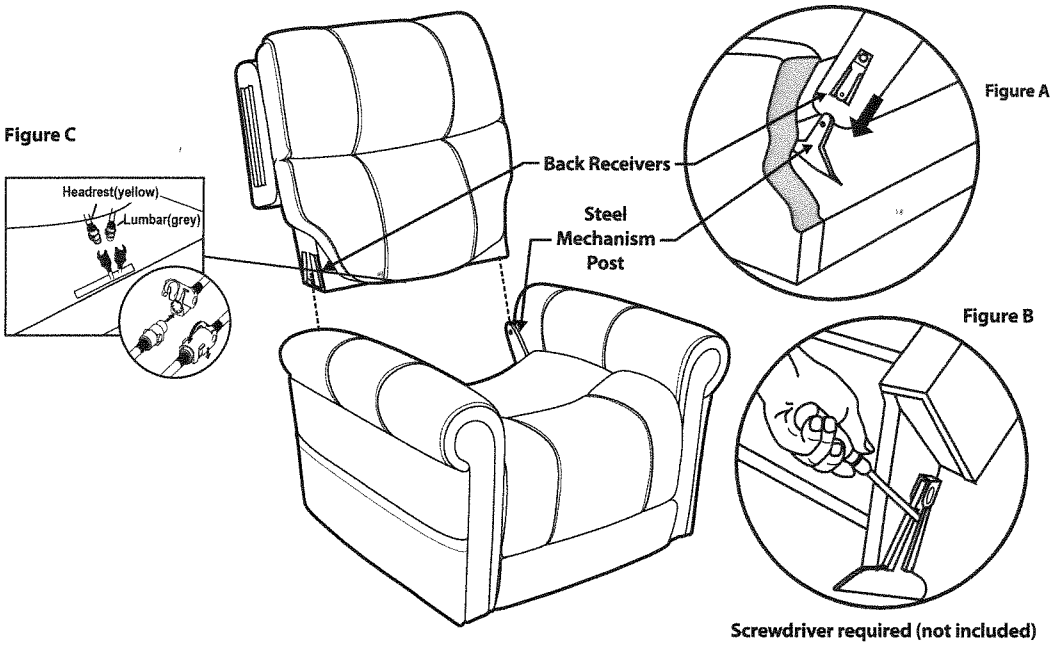

CAUTION: PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY PROCESS. IT IS RECOMMENDED TO USE TWO PEOPLE WHEN ASSEMBLING AND REMOVING THE INSIDE BACKS TO AND FROM THE BASE OF THE FURNITURE.

STEP 1: Slide inside back receivers onto the steel mechanism posts in the base of the chair. (Figure A)

STEP 2: Press both sides of the back firmly into place until the back automatically locks into place.

STEP 3: To remove the back from the base, use a screwdriver pressing outward on the black tab in the metal receivers on both sides of the chair back and lift the back from the base of the chair. (Figure B)

STEP 4: Connect the Headrest and Lumbar cable plugs (Figure C). Headrest-only models consist one less set of cables.

ATTACHING THE CHAIR WINGS TO THE CHAIR BACK *

STEP 1: Slide the metal inserts on the chair's wings into the metal sleeves on the side of the chair back.

STEP 2: Slide the wings down until they are completely set on the backs meta sleeves.

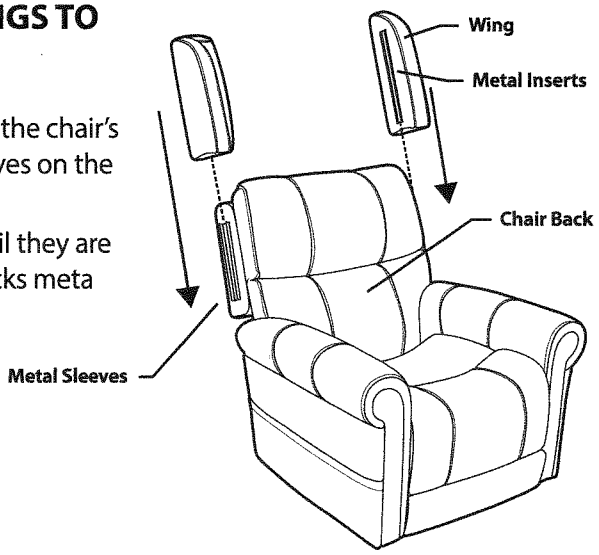

**** LUDLOW CAN SKIP THIS STEP.***

REMOTE COMPATIBLE WITH Summit / Pinnacle

Sitting Pretty

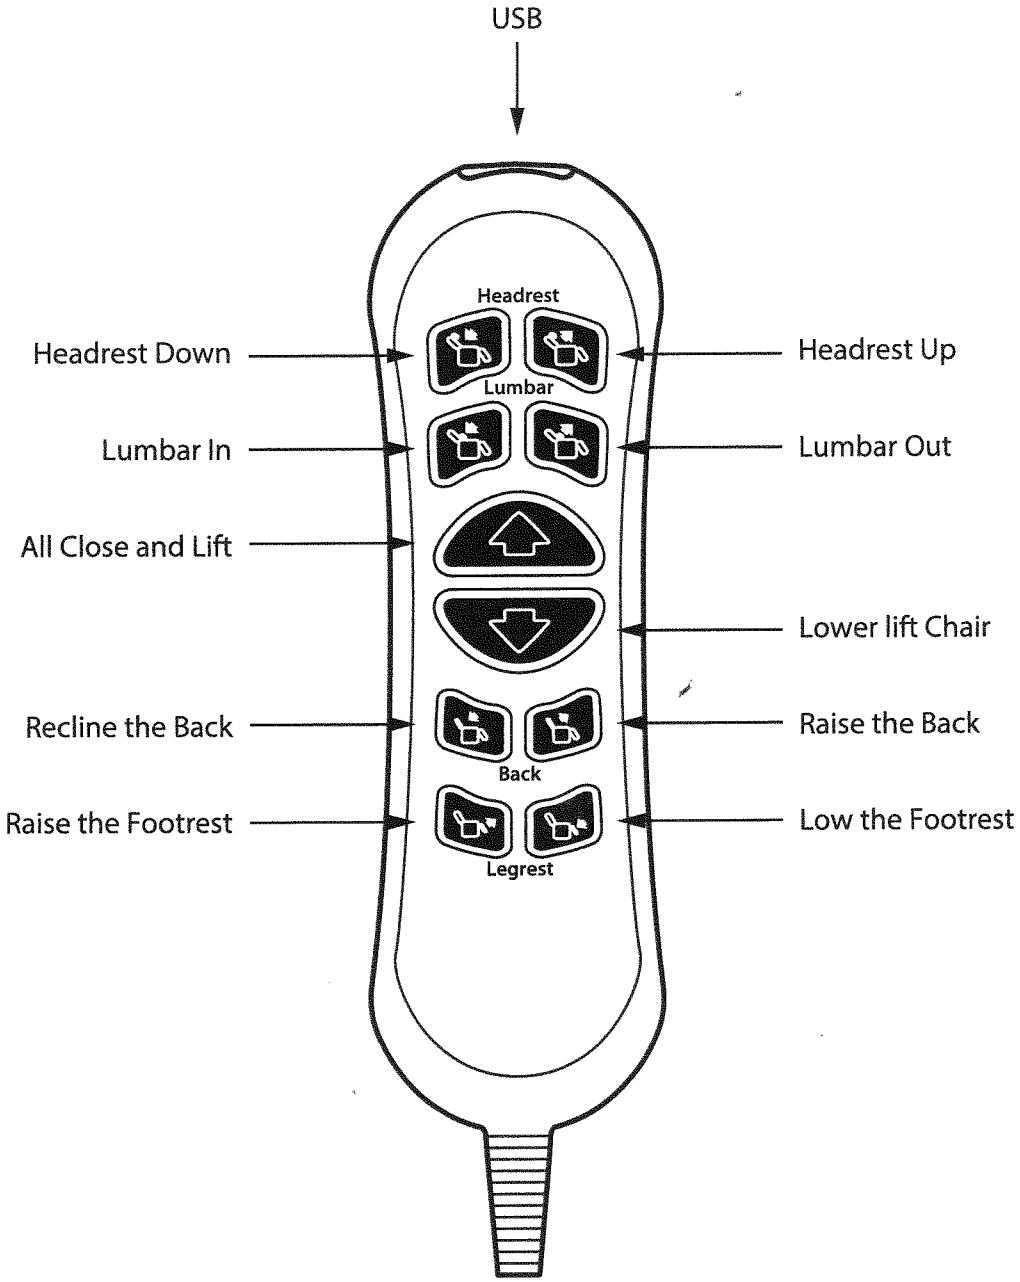

Sitting Pretty

Lithium-Ion Battery Pack Back-Up System

If your chair is equipped with an external transformer with a lithium-ion battery pack, your chair may be operated without being plugged into an electrical outlet for up to 48 hours.

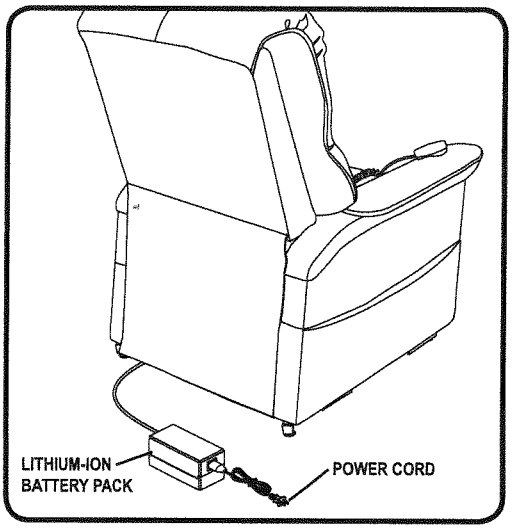

Figure A Chair Battery Back-up Location

Follow these steps to replace the lithium-ion battery pack batteries:

1. Unplug the external transformer power cord from the electrical outlet.
2. Position the external transformer so that the lithium-ion battery is facing upward (Figure A).
3. Gently bump with your hand the end of the lithium-ion battery pack to dislodge it from external transformer.
4. Slide the lithium-ion battery until it stops and then lift the lithium-ion battery o° of the external transformer.
5. Place the new lithium-ion battery on top of the external transformer with the securement grooves toward the external transformer .(Figure B).
6. Slide the new lithium-ion battery onto the external transformer until it clicks into place.

NOTE: Remove the lithium-ion battery from the battery pack when your chair isn't being used for an extended period of time. The chair will draw power from the battery even when it is not in use.

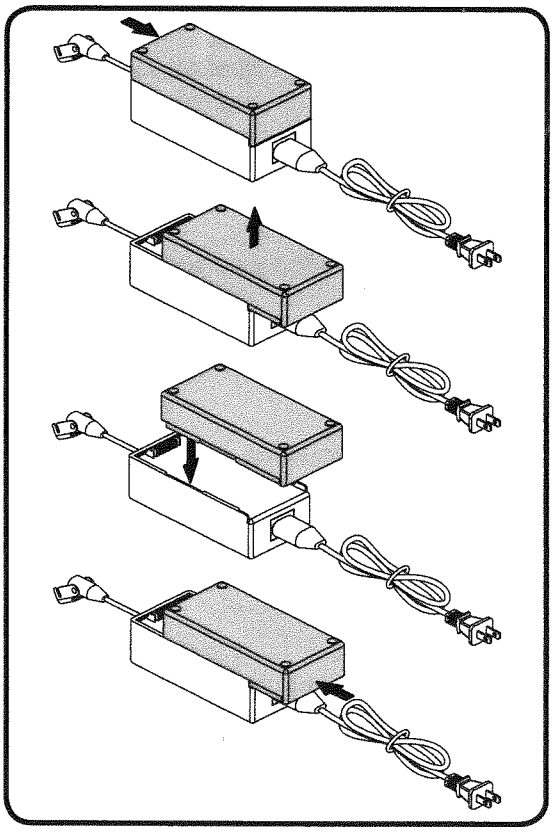

Figure B Lithium-Ion Battery Replacement

TROUBLESHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTION
Chair doesn't recliner or lift.	Transformer may not connected well.	• Check the power supply has been correctlly conneced to socket. • Confirm the wire from chair to transformer is firmly connected.
The chair stretches or shrinks and stutters.	• The iron frame rests are deformed. • There is an even pause when the backrest or leg rest is opened. It is possible that the motor hall sensor is damaged.	• Replace the iron frame. • Replace the motor.
Some buttons on the handle are not working.	• The handle may be broken.	• Replace the handle.
Loud noise during massage work (clearly different from noise during normal operation)	Faulty air pump	Replace the air pump
Headrest and lumbar does not work	Headrest and lumbar motor may not connected well.	Check the headrest and lumbar motor has been correctly connected to socket

Product Protected By Following Patents:
Patented Articulating Power Headrest & Lumbar
US Patent: 10,736,423
01440A

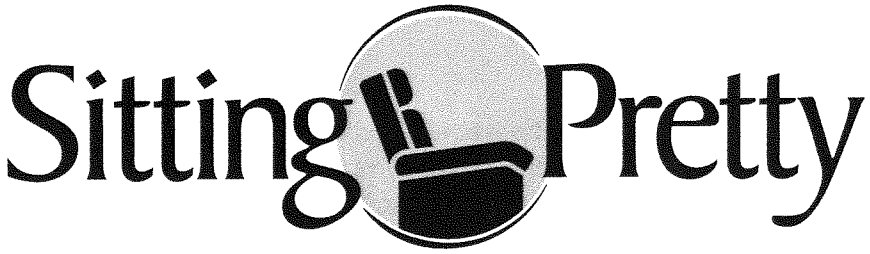

NOTE: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Theorem